
PICARRO G2205 HF Concentration Analyzer

- Superb sensitivity, precision & accuracy with virtually no drift
- Fast, continuous, real time measurements without interference
- Large dynamic range with high linearity
- No consumables required
- Installed and operational in minutes
- Rugged and insensitive to changes in ambient temperature

Advantage Note: The Picarro G2205 Hydrogen Fluoride Analyzer is a real time, trace gas monitor capable of measuring HF with parts-pertrillion (ppt) sensitivity. The analyzer is based on Picarro's unique Cavity Ring Down Spectroscopy (CRDS), a time-based measurement utilizing a near-infrared laser to measure a spectral signature of the molecule. Gas is circulated in an optical measurement cavity with an effective path length of up to 20 kilometers. A patented, high-precision wavelength monitor makes certain that only the spectral feature of interest is being monitored, greatly reducing the analyzer's sensitivity to interfering gas species, and enabling ultra-trace gas concentration measurements even if there are other gases present. As a result, the analyzer maintains high linearity, precision, and accuracy over changing environmental conditions with minimal calibration required. Precise temperature and pressure control systems designed into the Picarro G2205 ensure accurate measurements over long periods of time with minimal use of calibration gases. The analyzer is exceptionally rugged, essentially drift and maintenance free, and requires no consumables, thereby offering significant ease of use and cost of ownership benefits.

Easily transportable from site to site, the analyzer can be set up and running within minutes, with essentially zero sample preparation. The gas concentration is displayed in real-time with no post-processing requirements, and data is continuously archived to the analyzer's internal hard drive. Designed to operate both in laboratories and other, harsher, environments, it can operate for many months without user interaction. The analyzer can be configured to automatically export



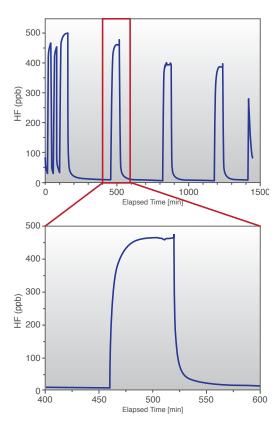

The Picarro G2205 analyzer for HF measurements provides fast response times.

measurement data at regular intervals via an Ethernet connection or it can output real-time data in digital (via RS-232 interface) or optional analog formats. Users can connect remotely with the analyzer's internal Windows 7 OS PC and control it through a standard Remote Desktop connection or with similar remote login software. The analyzer can also use its modem or Ethernet connection to automatically synchronize with an atomic clock time service. The software includes a valve sequencer, capable of controlling controlling up to six external solenoid valves and a rotary valve.

Performance Specifications		
Target Gas (in air-like matrix)	Lower Detectable Limit* (5 min., 3σ)	Zero Drift* (24 hrs / 1 month) (peak-to-peak, 5-minute average)
HF	30 ppt	± 0.15 / ± 0.5 ppb

^{*}Guaranteed for the operating conditions given below, after 1-hour equilibration.

System Specifications		
Measurement Technique	Cavity Ring-Down Spectroscopy (CRDS)	
Measurement Cell Temperature Control	± 0.005 °C	
Measurement Cell Pressure Control	± 0.0002 atm	
Measurement Range	0 - 0.5 ppm specifications guaranteed; 0 - 1.0 ppm operating range At higher concentrations, precision will be approx 30 ppt + 0.5 % of reading	
Measurement Interval	~ 5 seconds	
Response Time	90 - 10% fall time, 0.3 ppm - 0, < 10 mins. 10 - 90% rise time, 0 - 0.3 ppm, < 10 mins	
Sample Temperature	-10 to 45 °C	
Sample Flow Rate	< 0.6 slm at 760 Torr, no filtration required	
Sample Pressure	300 to 1000 Torr (40 to 133 kPa)	
Sample Humidity	< 99% R.H. non-condensing @ 40 °C. H ₂ O affects HF measurement. For optimal performance, either dry HF or provide a consistent H ₂ O concentration.	
Ambient Temperature Range	10 to 35 °C (operating); -10 to 50 °C (storage)	
Ambient Humidity	< 99% R.H. non-condensing	
Other Gases Measured	H ₂ O, O ₂	
Accessories	Pump (external, included), keyboard (included), mouse (included), LCD monitor (optional)	
Outputs	RS-232, Ethernet, USB, analog (optional) 0 – 10 V	
Fittings	1/4" Swagelok® PFA fittings	
Dimensions	Analyzer: 17" w x 7" h x 17.5" d (43.2 x 17.9 x 44.6 cm), not including 0.5" feet External Pump: 12.8" L x 8.9" h x 6.2" w (32.4 x 22.6 x 15.8 cm)	
Installation	Benchtop or 19" rack mount chassis	
Weight	70 lbs (31.75 kg) including pump	
Power Requirements	100 – 240 VAC, 47 – 63 Hz (auto-sensing), < 260 W start-up (total): 110 W (analyzer), 120 W (pump) at steady state	
Calibration	Calibration measurements for this instrument are limited by the ability to generate a constant concentration sample. The availability of commercially available standards suitable for your application should be investigated. Please contact Picarro for further information.	